



**Exercise 3-1**

1. Open file RW\_J7S0066.dgn. Create the Proposed Right of Way chains from the provided survey data. You will create two chains; a north (left side) chain and give it the name of proprwlt and a south (right side) chain and give it the name of prort to store in the gpk file.

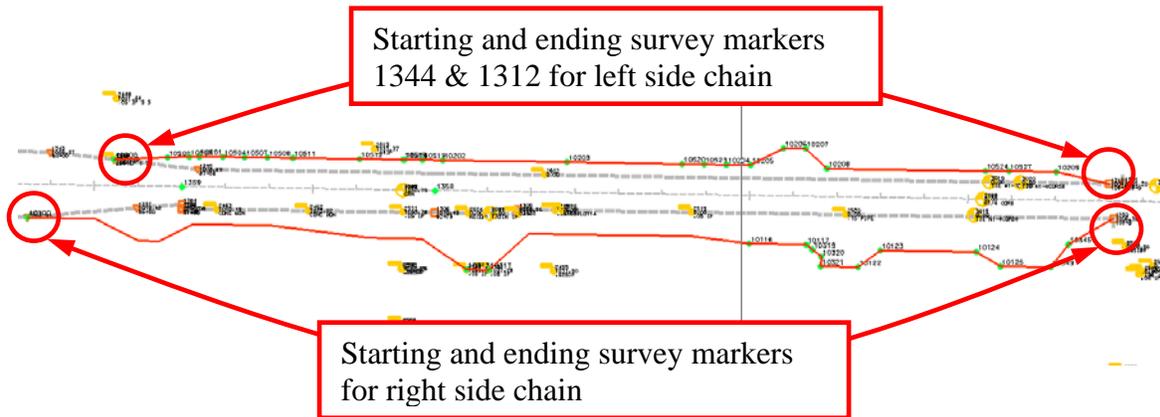


2. The left side of the Proposed Right of Way chain begins at survey marker 1344 and ends at survey marker 1312. Use the Store Chain From Elements tool to create the chain. Name the chain proprwlt. Use the point numbers listed in the dialog box below.

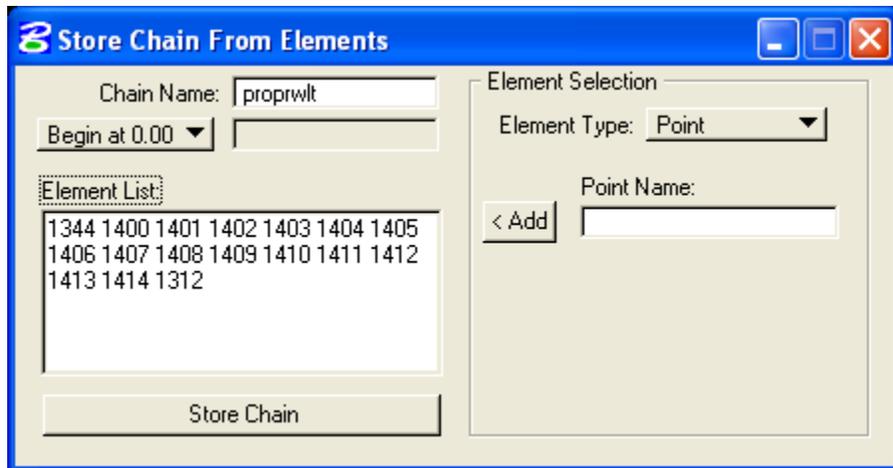

Select the Store Chain button once you have the dialog filled with the information needed to create your chain.

3. The right side of the Proposed Right of Way chain begins at survey marker 4813 and ends at survey marker 1290. Use the Store Chain From Elements tool to create the chain. Name the chain proprwt. Use the point numbers listed in the dialog box below.

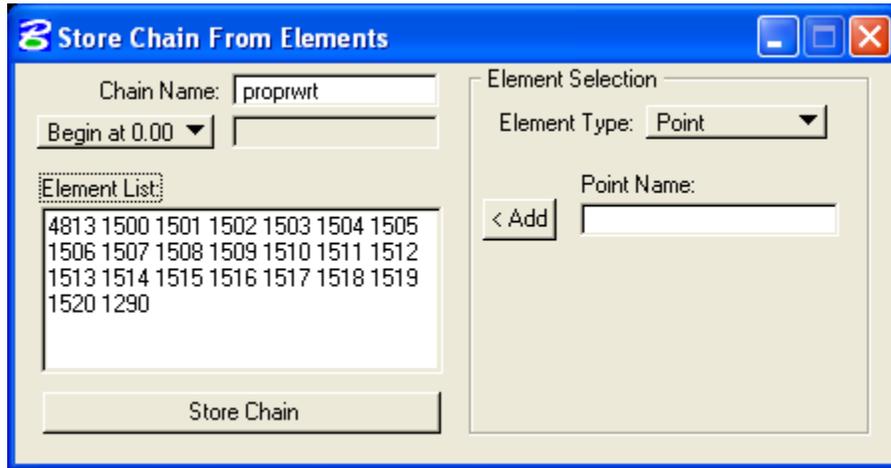

Select the Store Chain button once you have the dialog filled with the information needed to create your chain.