
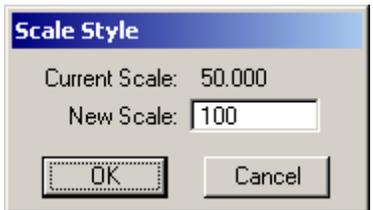



5.1 Exercise

1. Open the MicroStation file **rw_j7s0066.dgn**. Do a fit view and turn **Display** off for all reference files.


2. Start the **Plan View Labeler**. Go to the **Scale** pulldown and select **Change Scale**. Set the Scale Style to **100** so the labels plot out to the correct scale.

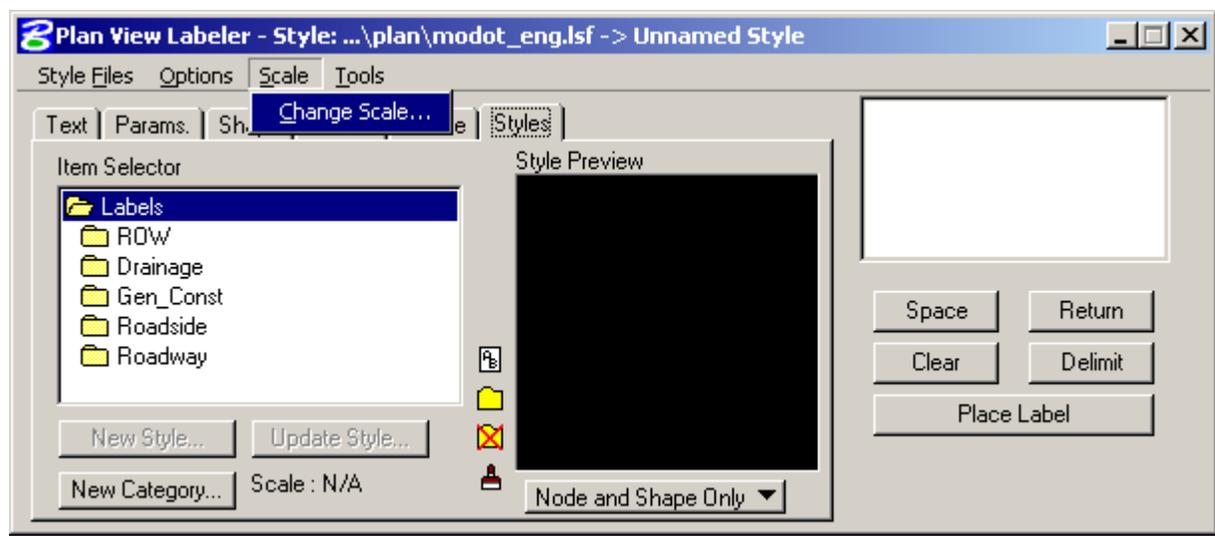


- In the Plan View Labeler, go to the **Styles** tab. In this tab, select the **ROW** folder and then single click on the desired right of way label. Use the **New R/W Sta. & Off.** for this exercise. You will now see the preview of the selected style in the preview window. If this is the desired style for the label, double click on the style and it will automatically place in the white window box in the upper right corner of the Labeler dialog.

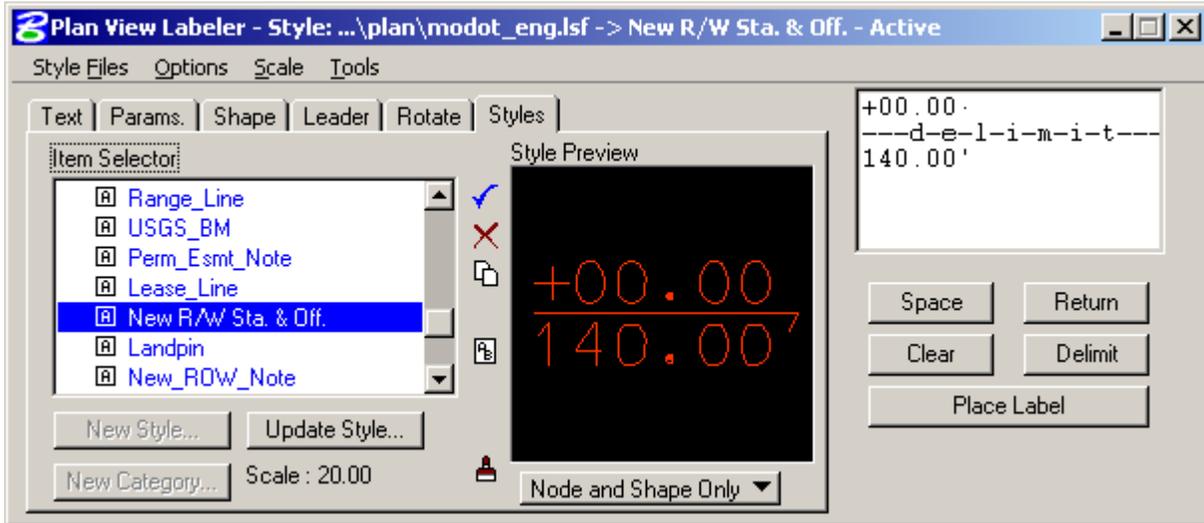

- Now that the style of label has been selected, go back to the **Text** tab. In the dialog box, set the job number to **066** and the chain to **RTE66CL** if they are something different. Go and click on the **Data Point** option in the Label Feature area and in the file, snap on the desired point along the right of way line. Once it is selected, you will see the station and offset change in the white window box. Now the label is ready to be placed.

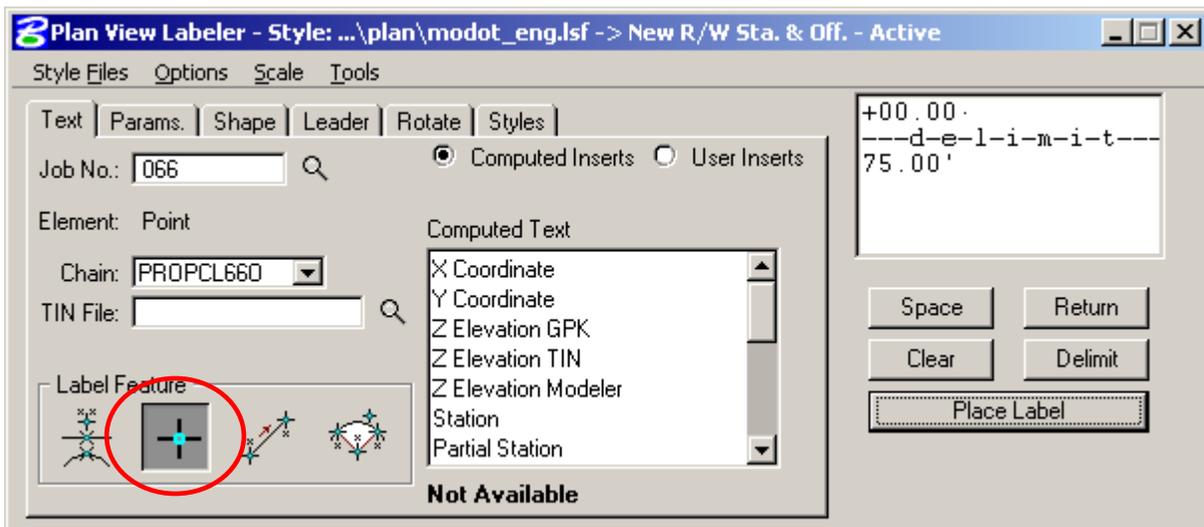

- To place the label in the MicroStation file, click on **Place Label** in the dialog box first. Next in the MicroStation file, click in the area where you want the label to be placed at. Finally click again in the file to finish the leader portion of the label.

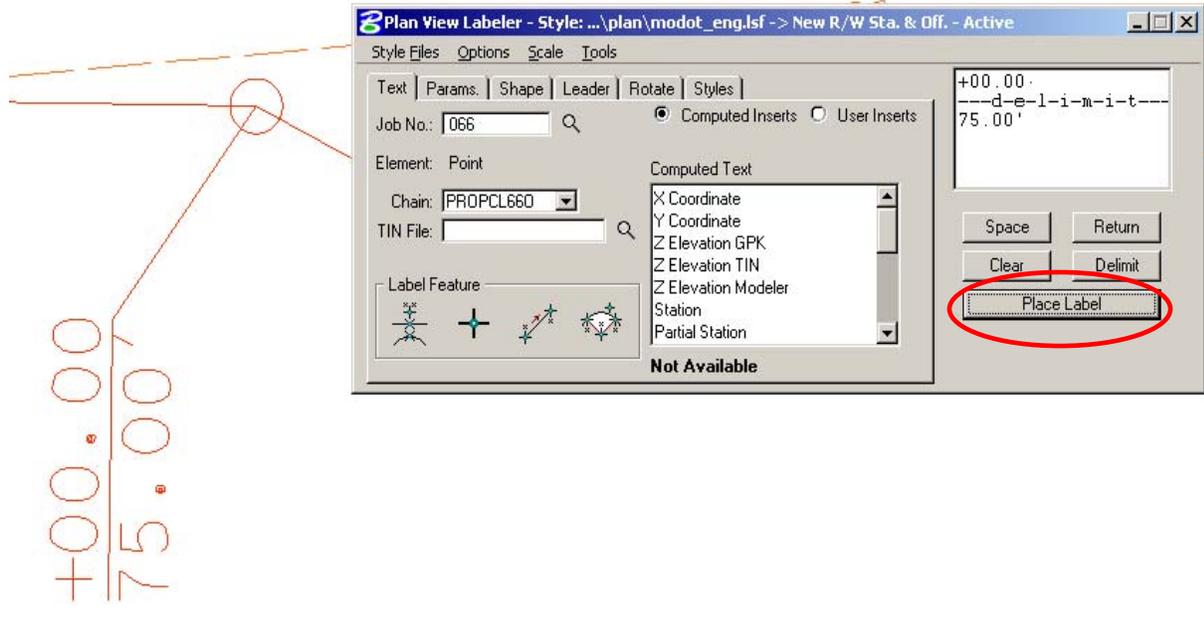

- Save the changes to the MicroStation file.